

SUPPLY NETWORK ANALYZER

CVM-144 SERIES

(PROFIBUS-DP)

INSTRUCTION MANUAL

(M 981 704 / 01A - GB)

© CIRCUTOR S.A.

;	Supply network analyzer CVM-144 (PROFIBUS) P	age No. 1
CON	ITENTS	page
1	DELIVERY SPOT CHECK	2
2	MAIN FEATURES	3
3	MODELS	5
4	INSTALLATION AND START-UP	6
	4.1 Installation	6
	4.2 CVM-144 connection terminal arrangement (power supply connection terminal)	8
	4.3 CVM-144 connection terminal arrangement (PROFIBUS module)	9
	4.4 CVM-144 connection terminal arrangement (Expansion card)	
_	4.5 Connection drawing for the CVM-144	
5	OPERATION MODE	17
6	SET-UP PROCEDURE	19
	6.1 Phase-to-Phase or Phase-to-Neutral voltages	20
	6.2 Voltage display mode	20 21
	6.4 Current Transformer Primary.	
	6.5 Transformation ratio for the measurement of neutral and residual curren	t23
	6.6 Setting power demand utility screens	25
	6.7 Initial screen setting	26
	6.8 Setting of the display shutdown time	
	6.9 Clearing energy counters	
	6.11 - Additional screens when RFLAY OUTPUTS (2 relays) are equipped	20 29
	6.12 Additional screens with 4 - 20 mA outputs v inputs.	
7 -	SPECIFICATIONS	41
л. 8-	SAFETY CONSIDERATIONS	43
٥. ٩	ΜΔΙΝΤΕΝΔΝΩΕ	10 43
3 10 -		
10		43
11	11.1 - Indicators	
	11.2 - Connection arrangement	45 46
	11.3 Technical specifications	47
	11.4 Data format	47
12	APPENDIX A: Second SET-UP of the CVM-144	52
	12.1 SET-UP locking or unlocking	52
13	APPENDIX B: Insertion of an expansion module into a CVM-144 unit	53

1.- DELIVERY SPOT CHECK

This manual is issued to help all the **CVM-144 (PROFIBUS)** users to install and use it in order get the best from it. After receiving the unit, please check the following points:

- (a) Does this device correspond to your order specifications?
- (b) Check if any damage was done during the shipment process.
- (c) Verify that it includes the correct instruction manual.
- (d) Diskette with PROFIBUS driver (GSD file).



The manual you hold in your hands contains information and warnings about the **CVM-144** that the user should respect in order to guarantee a proper operation of all the instrument functions and keep its safety conditions.

 Δ Before powering the instrument for the first time, verify following points:

(a) Power supply: see rear part of your CVM-144

□ Standard: 230 V a.c. Single-phase, Frequency: 50 ... 60 Hz

□ Other supply voltages, on request.

(b) Maximum measuring voltage:

□ Standard: 300 V a.c. phase-neutral / 520 V a.c. between phases

Other models: on request

CVM144 - measuring 110V: 110 V a.c. phase-to-neutral /190 V a.c. phase-to-phase CVM144 - measuring 500V: 500 V a.c. phase-to-neutral /866 V a.c. phase-to-phase

(c) Maximum measurable current: Current transformer of In / 5 A a.c.

2.- MAIN FEATURES

The **CVM-144** power meter is a programmable measuring instrument, offering several operation possibilities selectable in its SET-UP option. Before power supplying the instrument, read the **CONNECTIONS and SET-UP** sections and choose the most suitable operation mode for getting your desired data.



The CVM-144 is an instrument which measures, calculates and displays all the main electrical parameters at any electrical network (balanced or not). The measuring is true RMS value, through three a.c. voltage inputs and three a.c. current inputs (from Current Transformers .../ 5A).

Page No. 4

Parameter	Symbol	L1	L2	L3	Average
Voltage (phase-neutral)	V	Х	Х	Х	
Voltage (phase-phase)	V	Х	Х	Х	
Current	A	Х	х	Х	XX
Frequency	Hz	Х			
Active power	kW	Х	х	Х	х
Reactive power L	kvarL	х	х	Х	х
Reactive power C	kvarL / (-C)	х	х	Х	х
Apparent power	kVA				XX
Power factor	PF	x x x		х	
Cos φ					XX
Power demand	Pd	х			
kW h	energy				х
kvarhL	energy				х
kvarhC	energy				х
Neutral current	I _N	x			
Voltage THD	% THD- V	x x x			
Current THD	% THD- A	Х	Х	Х	
Individual harmonic		ХХ	XX	XX	
current content (Up to the 15 th)					
Analog inputs	Input			XX	
Earth leakage (residual) current	<u>/</u>			х	

By means of an internal microprocessor it simultaneously measures:

Available: **x:** Display and communications

xx: Communications

The CVM-144 delivers the visualization of above listed parameters by means of three 4-digit, led type, displays. Up to 3 parameters can be simultaneously read in the screen.

OTHER FEATURES

- Low-size (144 x 144 mm), panel-mounting analyzer.
- True R.M.S. measuring system.
- Collection in memory of **maximum and minimum** values.
- Energy measurement (indication through a lighting led)
- Slave-mode PROFIBUS-DP communication.
- Maximum demand determination: kW, kVA, AIII or line-current.

3.- MODELS

Code	Model	Current measurement
7 70 555	CVM 144-Profibus	Shunts
7 70 556	CVM 144-ITF-Profibus	Isolated ITF

elay output igital input nalogue in easuremer	urrents
Code Expansion modules $ \mathcal{L} \cap \mathcal{L} \cap \mathcal{L} \leq 2$	Ū
7 70 570 Mod. CVM 144 C2	
7 70 571 Mod. CVM 144 C2 Analogue 2 3* 1*	
7 70 572 Mod. CVM 144 C2-Currents 2 X	
7 70 569 Mod. CVM 144 C2-Digital 2 4	

*Optionally 2 analog inputs and 2 analog outputs.

Code	ode Complete Kit		Relay Outputs	Measurement of neutral and residual currents
7 70 592	CVM 144-ITF-Profibus-C2-Currents	Isolated ITF	2	Х

Each CVM 144 supports as a maximum 1 expansion module

4.- INSTALLATION AND START-UP



The manual you hold in your hands contains information and warnings that the user should respect in order to guarantee a proper operation of all the instrument functions and keep its safety conditions. The instrument must not be powered and used until its definitive assembly on the cabinet's door.

If the instrument is not used as manufacturer's specifications, the protection of the instrument can be damaged.

When any protection failure is suspected to exist (for example, it presents external visible damages), the instrument must be immediately powered off. In this case contact a qualified service representative.

4.1.- Installation.

Before powering the instrument for the first time, verify following points:

a.- Power supply: see rear part of your CVM-144

- Standard supply : Single-phase **230** $V \sim (a.c.)$ • On request: other voltages
- Frequency : 50 - 60 Hz - Supply voltage tolerance : - 10 % / + 15 - Connection terminal : Terminals 1 - 2 (Power supply)
- Burden

: 5 VA

b.-Maximum voltage at the voltage measuring circuit:

□ Standard : 300 V a.c. phase-to-neutral/520 V a.c. phase-to-phase 45 to 65 Hz

Other models on request :

CVM-144-measuring 500 V: 500 Va.c. phase-to-neutral/866 Va.c. phase-to-phase CVM-144-measuring 110 V: 110 Va.c. phase-to-neutral/190 Va.c. phase-to-phase

c.- Maximum allowable current : Current Transformer of In / 5 A a.c.

d.- Operation conditions :

- Humidity

- Operation temperature range : -10 to +50 °C
 - : 5 to 95 % R.H. non-condensing
- Altitude : below 2000 m
- e.- Safety :
 - Designed to meet protection class III- 300 V a.c. as (EN 61010).
 - Protection against electric shock by class II double-isolation

Mounting:

Instrument is to be mounted on panel (cut-out 138⁺¹ x 138⁺¹ mm, as per DIN 43 700). All connections keep inside the cabinet.

Note that with the instrument powered on, the terminals could be dangerous to touching and cover opening actions or elements removal may allow accessing dangerous parts. Therefore, the instrument must not be used until this is completely installed.

The instrument must be connected to a power supply circuit protected with gl type (IEC 269) or M type fuses rated between 0.5 and 2 A. This circuit should be provided with a circuit breaker or any equivalent element to connect (ON) or disconnect (OFF) the instrument from the power supply network. The supply and measuring voltage circuits will be both connected through a wire with a minimum cross-section of 1 mm^2 .

The line of the current transformer secondary will have a minimum cross-section of 2,5 mm².

4.2.- CVM-144 connection terminal arrangement (power supply connection terminal) (see lable on the rear part)



NOTE: Terminals 3, 5, 7 are internally connected to the 9 terminal (Neutral) ... / 5 A current inputs are isolated for the ITF model.

4.3.- CVM-144 connection terminal arrangement (PROFIBUS module) (See lable on the rear part)

Lo	Hi	Bus Bus Error State	Bus Power	PROFIBUS-DP	
Slave	ID				

	DB-9 connector				
No.	Terminal description	No.	Terminal description		
1	GND over 100 ohm	5	GND		
	resistor	6	Voltage + 5 V		
2	Not used	7	Not used		
3	A (Tx / Rx +)	8	B (Tx / Rx -)		
4	RTS (Control A)	9	GND		

4.4.- CVM-144 connection terminal arrangement (Expansion card) (see lable on the rear part)

Expansion modules available for the CVM-144 with PROFIBUS communication are those which have not communication abilities.

The connection arrangement of these above mentioned expansion cards is following outlined:

4.4.1.- Basic card (7 70 570)

Description	Card connection terminal arrangement
Mod CVM 144-C2 (Code: 7 70 570)	21 22 23 24 RL2 250 V~ 3 A

	Mod CVM 144 -C2	(C)	ode: 7 70 570)
No.	Terminal description	No.	Terminal description
13	No used	19	No used
14	No used	20	No used
15	No used	21	Relay RL2 output
16	No used	22	Relay RL2 common
17	No used	23	Relay RL1 output
18	No used	24	Relay RL1 common

4.4.2.- Card for analog Inputs/Outputs (7 70 571)

Description	Card connection terminal arrangement
Mod CVM 144 -C2-Analogue (Code: 7 70 571)	13 14 15 16 17 18 19 20 21 22 23 24 COM OUT1 IN3 IN2 IN1 nc nc nc nc RL2 RL1 (-) (+) (+) (+) (+) 250 V~ 3 A

Ν	Mod CVM 144 -C2-Analogue (Code: 7 70 571)				
N٥	Terminal description	N٥	Terminal description		
13	4-20 mA I/O common	19	No used		
14	4-20 mA D/A1 output	20	No used		
15	4-20 mA A/D3 input	21	Relay RL2 output		
16	4-20 mA A/D2 input	22	Relay RL2 common		
17	4-20 mA A/D1 input	23	Relay RL1 output		
18	No used	24	Relay RL1 common		

--- Page No. 11

4.4.3.- Card for digital Inputs (7 70 569)

Mod CVM 144 -C2-Digital ¹³ 14 15 16 17 ^{COM} IN4 IN3 IN2 IN1 (·) (+) (+) (+) (+) Digital INPUT: 24 V== 6 mA ¹⁸ 19 20 ²¹ 22 23 24 (Code: 7 70 569) ^{Digital} INPUT: 24 V== 6 mA ^e mA ²⁰ 21 22 23 24	Description	Card connection terminal arrangement
	Mod CVM 144 -C2-Digital (Code: 7 70 569)	13 14 15 16 17 18 19 20 21 22 23 24 COM IN4 IN3 IN2 IN1 IN1

	Mod CVM 144 -C2-Digital (Code: 7 70 579)				
No Terminal description No		No	Terminal description		
13	digital inputs common	19	No used		
14	digital input IN4	20	No used		
15	digital input IN3	21	Relay RL2 output		
16	digital input IN2	22	Relay RL2 common		
17	digital input IN1	23	Relay RL1 output		
18	No used	24	Relay RL1 common		

4.4.4.- Module for residual and neutral currents (770 572)

Description	Lable in the expansion module connection t	erminal
Mod CVM 144 -C2-Currents	$\begin{bmatrix} 13 & 14 & 15 & 16 & 17 \\ s_{1} & s_{2} & s_{2} \\ \bullet & \bullet & \bullet & \bullet \\ \bullet & \bullet & \bullet & \bullet \\ \bullet & \bullet &$	23 24 RL1
(Code: 7 70 572)	$P_{\underline{I}} \xrightarrow{P_1} 30A \xrightarrow{3A} 3A \xrightarrow{P_2} 1N/5A \xrightarrow{250} V \sim$	- 3 A

	Mod CVM 144 C2-Currei	(Code: 7 70 572)	
Nº Terminal description		N٥	Terminal description
13	Measur. residual current S1	19	No used
14	14 Measur. residual current S2 (30 A)		No used
15	15 Measur. residual current S2 (3 A)		Relay RL2 output
16	Measur. neutral current S1	22	Relay RL2 common
17	Measur. neutral current S2	23	Relay RL1 output
18	Not used	24	Relay RL1 common

Notes:

- For the measurement of the residual current (earth leakage current), the use of transformers of the WG xx series is required. These transformers can be connected to the 3 A or 30 A rated input, depending on the needed measuring range.
- For the measurement of the neutral current, the use of .../5A current transformers is required.

• Connection diagram of the WG transformer (for residual current purposes)



One single WG series transformer can be use for the measurement of residual currents within the range to 3 A or to 30 A, jut depending on the arranged connection diagram.

The current input used for the residual current measurement must agree with the input selected in the pertinent a Setup section (6.5.-)

The appropriate connection mode to execute the measurement of the residual current with the CVM-144 is shown in the below tables:

Measureme	nt of residual current	vith a maximum	value of 3 A (30 mA 3 A)
WG	Transformer	Mod C	CVM 144Currents
Terminal No.	Description	Terminal No.	Description
1S1	Measuring winding S1	13	Residual current measur. S1
1S2	Measuring winding S2	15	Residual current measur. S2
2S1	Not used		(3 A)
2S2	Not used		

Measurement of residual current with a maximum value of 30 A (300 mA 30 A)						
WG Transformer Mod CVM 144Currents						
Terminal No.	Description	Terminal No.	Description			
1S1	Measuring winding S1	13	Residual current measur. S1			
1S2	Measuring winding S2	14	Residual current measur. S2			
2S1	Not used		(30 A)			
2S2	Not used					

4.5.- Connection drawing for the CVM-144 :

a.- Three-phase network.- 4 wires (low voltage) :





----- Supply network analyzer CVM-144 (PROFIBUS) ----- Page No. 15 c.- Three-phase network - 3 wires (2 P.T. and 3 C.T.):



----- Supply network analyzer CVM-144 (PROFIBUS) ----- Page No. 16 d.- Three-phase network - 3 wires (2 P.T. and 2 C.T.):



IMPORTANT REMARK! If <u>power = -0.01</u> is shown for any of the phases (codes 03, 09 and 15) and voltage and current are not zero for this phase, check out following points:

- Assure that L1, L2 and L3 phases coincide in voltage and current.
- Correct polarity? Reverse the current transformer placed at this phase.

5.- OPERATION MODE

The instrument has three displays. Each one has also a LED type indicators (red colour). Every led will be on according to the parameter presently shown in screen.

When the CVM-144 is powered on, 2 screens with the indication of the program version and the hardware configuration.

If the message "EEPr Err." is shown by display, it means that any problem on the hardware configuration has been detected. If this happens, please contact to the technical service.

After some seconds, the analyzer is ready for operation and shows one of the available screens. A led next to the shown parameter is on.



Parameters on display can be switch by pressing the key (\clubsuit) . Leds on the right or left indicate the parameters shown on screen at any moment.

When the first led (red) is on, it means that VOLTAGE values are shown on screen, that is, the user can read the voltage of the phase L1 (V1), voltage of the phase L2 (V2) and voltage of the phase L3 (V3).

Whether the key " is press, the next led will be on, so indicating that for this screen CURRENT values of each phase are now shown.

Pressing again the key ", the next led will be on, and the screen will shown following three parameters, and so successively.

Max

min

Pressing the "**max**" or "**min**" key, maximum or minimum values for the parameters being shown by display, respectively, appear in screen.

This function is only valid while you keep pressing the "**max**" or "**min**" key. If you stop pressing the key the instantaneous values will appear again after 5 seconds.

While showing maximum or minimum values the LED indicators will keep blinking.

reset

Pressing the "**reset**" key the system is reset. This is equivalent to switch off the power supply of the instrument. The maximum and minimum values recorded will be automatically deleted from the internal memory.

If you are in the set-up process and press the "**reset**" key, you exit it without saving any modification that you might have done (this event will depend on the setup section that is accessed when the reset action is carried out) and reset of the system occurs.

6.- SET-UP PROCEDURE

The set-up procedure of the CVM-144 is performed by means of several SET-UP options.

For accessing the **set-up menu** the keys **max** & **min** must be simultaneously pressed once the instrument is at the main screen.

When accessing the **SET-UP**, the message "**SET-UP unlo**" (1) is shown for some seconds on screen, or, otherwise, the message "**SET-UP loc**" (2).

- (1) <u>Set-up UNLO</u> (SET-UP unlocked) : when the SET-UP is accessed, configuration parameters can be either visualized and modified.
- (2) <u>Set-up LOC</u> (SET-UP locked) : when the SET-UP is accessed, configuration parameters can be visualized but cannot be modified .

Once into the SET-UP, use the keyboard to select different options and enter required variables:

- The key 🗢 validates de value and pass to the next menu.
- The key **MAX** permits to select among different options in a menu, or to increase a digit when a variable is being entered.
- The key **MIN** permits to move the cursor along the digits.

Different options are following shown in a sequential mode:

- 1. Choice of visualization of phase-to-neutral or phase-to-phase voltages
- 2. Voltage displaying format
- 3. Voltage transformation ratio.
- 4. Value of the current transformer primary : 1 a 10000 A
- 5. Value of the current primary value for the measurement of neutral and residual currents.
- 6. Power demand meter setting
- 7. Choice of default initial screen
- 8. Time for display shutdown
- 9. Deleting energy counters
- 10. Choice of harmonic distortion determination mode: d% or THD%
- 11. Alarms setting : RELAY 1 (OUT 1) & RELAY 2 (OUT 2)
- 12. Analog outputs and inputs setting

6.1.- Phase-to-Phase or Phase-to-Neutral voltages

After the word "**set**" you will see on the three displays the voltages of the phases L1, L2, L3.

U1		U12
U2	or	U23
U3		U31

- Phase to Neutral Voltages: U1, U2, U3
- Phase to Phase Voltages : U12, U23, U31
- a) To select one of the voltage options just press the green key "**max**" and both options will appear alternately.
- b) When you get in the display the desired option just press the "- key to validate it and access to the next set-up option.

6.2.- Voltage display mode

This option permits the user to select the voltage display mode. That way, the choice between viewing the voltage with one decimal digit or without decimals is user-programmable.



- c) To select one of the voltage options just press the green key "**max**" and both options will appear alternately.
- d) When you get in the display the desired option just press the "- key to validate it and access to the next set-up option.

6.3.- Voltage transformation ratio

6.3.1.- Voltage Transformer Primary

On the screen we read the word "SET U P" followed by 5 digits. They allow us setting the **primary of the voltage transformer**.

SE	Т	U	
Ρ	-	-	
-	-	-	

a.- To write or modify the value just repeatedly press the "**max**" key and the blinking digit value will be increased.

b.- When the value on screen is the proper one, we can pass to the next digit by pressing the "**min**" key in order to modify the other values.

c.- When the blinking digit is the last one, pressing the "**min**" key we go back to the initial value: set values can be again modified.

d.- Press" 🗢 " to pass to the next setup option.

<u>Note:</u> Maximum values of transformation ratios which are allowable to be set, depend on the full-scale value of the measuring instrument. (see indications on the rear side lable).

FULL-SCALE VALUE	MAXIMUM ALLOWABLE VALUE
110 V~	99,999
300 V~	70,000
500 V~	40,000

- In case that a value higher than the maximum allowable value is validated

" , the screen will blink and the previous set value will be kept in memory.

6.3.2.- Voltage Transformer Secondary

We can now set the value of the secondary of the voltage transformer. Only three digits are available:



Same process than in point 6.2.-:

- "**max**" key: Allows us modifying the value of the blinking digit. Each time it is pressed the value is increased.
- "min" key: Allows us the validation of the blinking digit and going to the next one.
- Press " to pass to the next setup option.

If the CVM144 is directly connected to the mains (without voltage transformer) the values of primary and secondary must be the same, for instance 00001/001.

6.4.- Current Transformer Primary

"SET A P" and five digits appear on screen allowing us to set the primary of the current transformer.



- a) To enter or modify the value of the C.T.'s primary, just repeatedly press "**max**" to increase the value of the blinking digit.
- b) When the value in screen is the required, pass to the next digit by pressing "**min**", so that the whole value can be set.
- c) When the last digit blinks, pressing then "**min**" the first digit is again accessed, so that set value can be modified if required.

d) To access next set-up option press "

NOTES:

- The secondary of the current transformers is not programmable. It is automatically set at 5 A (... / 5 A ac)
- The primary current value to be set is also limited by the following condition: The maximum allowable primary current value which can be set is defined by the fact that the multiplication of the primary voltage value by this primary current value cannot exceed 20,000,000.

6.5.- Transformation ratio for the measurement of neutral and residual current

This section is only applicable for the CVM-144 units equipped with the module for residual and neutral current measurement (7 70 572)

6.5.1.- Primary of the current transformer for neutral current measur. (I_N)

The screen shows the message "A_n P" and fixe numeric digits that permit the user to set the value of the current transformer for the neutral current measurement.



- a) To enter or modify the value of the C.T.'s primary, just repeatedly press "**max**" to increase the value of the blinking digit.
- b) When the value in screen is the required, pass to the next digit by pressing "**min**", so that the whole value can be set.
- c) When the last digit blinks, pressing then "**min**" the first digit is again accessed, so that set value can be modified if required.
- d) To access next set-up option press "

NOTES:

- The secondary of the current transformers is not programmable. It is automatically set at 5 A (... / 5 A a.c.)

6.5.2.- Residual current measuring range: 3 A or 30 A

You will view in screen the message "SET A_L". Set then the right measuring range of the residual current input to which the WG transformer has been connected..

Two possible values are available (the choice must coincide with the measuring transformer wiring): 3 A or 30 A.



a) To select the appropriate input / range just press the key "**max**", the value will switch from one option to the other one.

b) To pass to the next option press "()".

<u>NOTE :</u>

- For the measurement of the residual current (earth leakage current), the use of transformers of the WG xx series is required. These transformers can be connected to the 3 A or 30 A rated input, depending on the needed measuring range.
- For the measurement of the neutral current, the use of .../5A current transformers is required.

6.6.- Setting power demand utility screens.

Push the key " I and the following screens will appear by display:

1.- PARAMETER TO CONTROL

("Pd Code xx")

None		00
Three phase active power	kW III	16
Three phase apparent power	kVA III	34
Average three-phase current	AIII	36
Single line current	A1 – A2 – A3	A-PH

Value of power integrated during the programmed demand period.

- 2.- DEMAND PERIOD (1 to 60 min.) ("Pd Per xx")
- 3.- CLEAR MAXIMUM VALUE IN MEMORY

("CLr Pd xx") **no** or **YES**

Programming mode:

- "**max**" key: allows choosing the different available options.
- "**min**" key: allows the validation of the blinking digit and go forward to the next digit (only for the "Pd Per xx" option).
- To pass to the next option press "

If you don't want to modify anything, just press the "-" key three times without modifying any value.

6.7.- Initial screen setting

This option allows choice among fixed or rotary screen:

- a) **Fixed screen** (choice is switch just pressing \bigcirc): choice the initial screen to be shown when the CVM-144 is powered (or when the CVM-144 is reset).
- b) Rotary screens: all screens are successively shown at intervals of 5 s.

This option is noticed by means of some leds:



- The key "**max**": permits to modify the selected page. The led of the selected option will be on. Whether rotary screens option is selected, then all leds will be on.
- Press " To validate the choice.

6.8.- Setting of the display shutdown time

Setting of the period of time to go by, from the moment that the CVM keyboard is not touched anymore, before the CVM display is automatically shut down (low consumption mode):



When the display is shut down, a point at the bottom left corner of the CVM will keep blinking. The display will be automatically turned on when any CVM key is pressed.

- "max" key: to modify the value of the blinking value.
- "min" key: to validate the blinking value and go to the next digit.

6.9.- Clearing energy counters

On display we see "CLR ENER no" (Clear energy counters).

- "max": To select "YES" or "no"

- " To validate the choice and pass to the following set-up option.

Display:

If any of the energies is programmed (kWh, kvarhL or kvarhC), it is displayed as follows:

•	kWh
max	MWh
min	Wh

Example : If the accumulated energy is 32.534,810 kWh, it will be displayed as follows:

3	2		_	MWh
	2	534		kWh
			810	Wh

	2534	kWh
max	32	MWh
min	810	Wh

<u>Note</u> : the energy counter range is limited at **999.999.999 Wh** , that is, when the value of **1 GWh** is reached, the counter is reset to zero.

6.10.- THD or D setting



Two modes for the harmonic distortion calculation can be selected:

- a) **d** % : total value of the harmonic distortion referred to the fundamental value.
- b) Thd % : total value of the harmonic distortion referred to the R.M.S. value.

The selected option will be the one shown on screen.

- To select any option just press "**max**" to switch between the two available options.
- Press " to validate the choice. Since all set-up options have been completed, the set-up is exited, all modifications are saved in memory, and the running mode automatically starts up.

6.11.- Additional screens when <u>RELAY OUTPUTS</u> (2 relays) are equipped

With these outputs the CVM-144...C2 can be set to deliver:

A.- **Pulse every certain kWh or kvarh (ENERGY).** You can define the value corresponding to the energy consumed for generating a pulse (0.5 s long): kWh / 1 pulse or kvarh / 1 pulse

B.- ALARM conditions: the parameter to be controlled, the maximum value, the minimum value and the delay are user-definable for each relay output.

On the CVM-144 screen following messages appear at this SET-UP option:



[©]Depending on the selected variable we will pass to a.- or b.- sections

 \square In case that no parameter is wanted to be programmed set *par. No. = 00.*

Parameter	Symbol	Code	Symbol	Code	Symbol	Code
	phase L1		phase L2		phase L3	
Single voltage	V 1	01	V 2	06	V 3	11
Current	A 1	02	A 2	07	A 3	12
Active power	kW 1	03	kW 2	08	kW 3	13
Reactive power	kvarL 1	04	kvarL 2	09	kvarL 3	14
Inductive/ Capacitive	kvarC 1		kvarC 2		kvarC 3	
Power factor	PF 1	05	PF 2	10	PF 3	15
% THD V	THD V1	25	THD V2	26	THD V3	27
% THD A	THD A1	28	THD A2	29	THD A3	30

Parameter	Symbol	Code	Parameter	Symbol	Code
Three-phase active power	kW III	16	Three-phase cos φ	Cos φ	19
Three-phase inductive power	kvarL III	17	Three-phase power factor	PF III	20
Three-phase capacitive power	kvarC III	18	Frequency	Hz	21
Active energy	kWh	31	Ph-Ph voltage L1- L2	V 12	22
Reactive energy (inductive)	kvarh. L	32	Ph-Ph voltage L2 - L3	V 23	23
Reactive energy (capacitive)	kvarh. C	33	Ph-Ph voltage L3 - L1	V 31	24
Three phase apparent power	kVA III	34			
Power demand	Pd	35	Power demand (L1)	Pd	35*
Three-phase current	AIII	36	Power demand (L2)	Pd	42*
Neutral current	I _N	37	Power demand (L3)	Pd	43*
Analog input 1	Input 1	38			
Analog input 2	Input 2	39			
Analog input 3	Input 3	40			
Residual (earth leakage)	<u>1</u>	41			
current	-				

* This parameters are only enabled if the maximum demand by line current has been programmed

There are, besides, some parameters that refer to 3 phases at once. In case that any of these parameter is selected, then the alarm will be activated always one phase complies with alarm settings.

Parameter	Symbol	Code
Line-to-neutral voltages	V1 or V2 or V3	90
Currents	11 or 12 or 13	91
Active powers	kW1 or kW2 or kW3	92
Reactive powers	kvar1 or kvar2 or kvar3	93
Power factors	PF1 or PF2 or PF3	94
Line-to-line voltages	V12 or V23 or V31	95
% THD V	THDV1 or THDV2 or THDV3	96
% THD I	THDI1 or THDI2 or THDI3	97

a.- If an ENERGY parameter is chosen: kWh (31), kvarhL (32) or kvarhC(33)



(1) Value of energy in kW : four digits with floating decimal point

Set-up procedure:

- "**max**" key: to modify the value of the blinking value. Every time it is pressed the value is increased.
- "min" key: to validate the blinking value and go to the next digit.

NOTE : When the last digit is reached, the position of the decimal can be move point with the "**max**" key.

Example for setting a 500 W / 1 pulse:

Firstly we enter the value, 0500, and following we place the decimal point at the right position with the "**max**" key \rightarrow 0.500 kW.

- For accessing to the next option, press " - I': set-up options for the second relay will appear.



Act as before. Pressing again " The set-up mode is exited.

b.- ALARM conditions (1 condition for each relay): If any other parameter (excepts for energies) is selected at (1), two outputs can be configured as alarms. For each output it is possible to set:

1	Any of the parameters measured by the CVM-144
2	MAXIMUM value
3	MINIMUM value
4	Delay for the conditions

These screens are successively displayed by the CVM-144 once the parameter has been selected (for the set-up of each option proceed as in the Section a.-):

b.1.- Programming the maximum value to be controlled:



The key "**max**" will increase the value of the blinking digit (0,1...9, sign --). Use the key "**min**" to pass to the following digit.

b.2.- Programming the minimum value to be controlled:



b.3.- Programming the delay:



- Press " $\textcircled{\label{eq:press}}$ " to pass to the next option: the set-up for the second relay is then shown:



Proceed as before. Pressing again " + the set-up option exited.

☑ ALARM ACTIVATION: Alarms operation depend on the set values of MAXIMUM and MINIMUM.

MIN +	MAX + max > min	ON OFF ON ====== 0 Min Max
MIN +	MAX + max < min	OFF ON OFF ==== ==== ===== 0 Max Min
MIN	MAX +	ON OFF ON ==== Min 0 Max
MIN +	MAX	OFF ON OFF ====== ====== Max 0 Min
MIN	MAX max > min	ON OFF ON ===== Min Max 0
MIN	MAX max < min	OFF ON OFF =====

ON = alarm activated -----> relay closed

OFF = alarm deactivated -----> relay open

☑ The **DELAY** set value is applied either to the connection or the disconnection when the alarm conditions occur.

Parameter	Format	Example
Voltage	V	220.5 = 220.5 V
		0220 = 220 V
Current	A	0150 = 150 A
Powers	kW, kvarL, kvarC	0.540 = 540 W
		250.5 = 250.5 kW
Energies	kWh, kvarLh, kvarCh	0.500 kWh
Power factor	+/- x.xx	- 0.70
Frequency	XX.X	50.0 = 50 Hz

☑ User-definable units for the different parameters are:

Output relay connection lay-out CVM-144...-C2 (2 relays):

Out1	Terminals	Signal	Out2
RELAY 1	23 - 24	N.O.	RELAY

Out2	Terminals	Signal
RELAY 2	21- 22	N.O.

6.12.- Additional screens with <u>4 - 20 mA outputs</u> y inputs

CVM-144 equipped with an "Analogue" type module provides **4 - 20 mA d.c.** or **0 - 20 mA d.c.** inputs and outputs (inputs can also optionally be 0-10 V type).

6.12.1.- Additional screen with the 4 - 20 mA output

These can be programmed to obtain an output signal proportional to any of the parameters measured by the CVM-144, including the ability of setting the scale (offset and full-scale values).

On the CVM screen following messages appear at this SET-UP point (provided the right module is connected to the equipment):

a.- Parameter choosing:



- "**max**" -- "**min**" keys: permits the user to choose any parameter measured by the CVM-144 but the parameters referred to energies..
- "display" key: validates the selected option and passes to the next setup screen.

b.- Election of 0 - 20 mA or 4 - 20 mA :



- "display": to validate the selected option and pass to the next setup screen.

c.- Scale offset:

Value of the parameter that we assign as the zero of the scale.

dA 1 Zero	OUTPUT D/A Nr.1 zero of the scale:
X.XXX	allows choosing the zero of the scale
	(four digits with floating decimal point)

- "**max**" key: it allows modifying the value of the blinking value.
- Every time it is pressed the number is increased.
- "min" key: it allows validating the blinking value and go to the next digit.

 ${\bf NOTE}$: When you arrive at the last digit, you can move the position of the decimal point with the "max" key.

- "display": to validate the selected option and pass to the next setup screen.

d.- <u>Full scale</u>: Value of the parameter to which we assign the 20 mA.

dA 1	OUTPUT D/A Nr.1
F.ESC	Full scale:
X.XXX	$\overset{\frown}{\cong}$ allows choosing the full scale (20 mA)
	(four digits with floating decimal point)

Proceed as in the previous section.

- For passing to the next option, press "**display**": the setup for the second output will appear (only if this output is available).

dA 2	OUTPUT	D/A	Nr.2
code			
XXXX			

Proceed as in the previous sections.

1.- Output calculation:

$Re \ solution = \frac{(20 - Zero)}{(F.scale - Offset)}$	<i>Offset & f. scale</i> = defined by the user <i>Zero</i> = 0 mA or 4 mA
mA = Re solution * (Mesure - Offset) + Zero	
mV = mA x ohms	mV _(100 ohms) = mA x 100

- Maximum load is of 500 Ω (10 V - 20 mA)

Output of the power factor parameter (PF):

0/4 mA					20 mA	
+0.00	Ind.	/	1.00 / ó	Cap.	- 0.00	
-0.00	Cap.	/	1.00 /	Ind.	+ 0.00	

6.12.2.- Additional screens with <u>4 - 20 mA inputs</u>

The **4-20 mA** analog inputs (which can also be optionally 0-10 V type) can be set to obtain the processed signal either by display or through communications. To complete the analog inputs management, the user must **program the scale values** (offset and full-scale value).

On the CVM screen following messages appear at this SET-UP point (provided the right module is connected to the equipment):

b.- Election of 0 - 20 mA or 4 - 20 mA :

In 1 Scal 4 - 20 INPUT A/D Nr.1 Scale : allows choosing a 0 - 20 mA or 4 - 20 input ("**max**" or "**min**" key)

* This choice is disable in case of 0-10 V type input card

- "display": to validate the selected option and pass to the next setup screen.

c.- Scale offset:

Value of the parameter that we assign as the zero of the scale.

In 1 Zero	INPUT A/D Nr.1 zero of the scale:
X.XXX	allows choosing the zero of the scale
	(four digits with floating decimal point)

- "**max**" key: it allows modifying the value of the blinking value.
- Every time it is pressed the number is increased.
- "min" key: it allows validating the blinking value and go to the next digit.

NOTE : When you arrive at the last digit, you can move the position of the decimal point with the "**max**" key.

- "display": to validate the selected option and pass to the next setup screen.

d.- <u>Full scale</u>: Value of the parameter to which we assign the 20 mA.

In 1	
F.ESC	
X.XXX	

INPUT A/D Nr.1 Full scale: allows choosing the full scale (20 mA) (four digits with floating decimal point)

Proceed as in the previous section.

- For passing to the next option, press "**display**": the setup for the second output will appear (only if this output is available).

Proceed similarly for all analog inputs.

7.- SPECIFICATIONS

Power supply : see specifications on the rear part of the CVM-144

- CVM-144 :	Single-phase : 230 V a.c.
	Voltage tolerance: +10 % / -15 %
	Frequency : 50 60 Hz
Burden	5 VA
Operation temperat	ure10 to 50 °C
Humidity	5% to 95% (without condensation).
Measuring Circuits	S:
Rated voltage 3	00 V a.c. Phase-to-Neutral / 520 V a.c. Phase-to-Phase
Frequency	45 to 65 Hz
Rated current	In / 5 A (isolated inputs in the CVM-144-ITF model)
Permanent overload	d1.2 ln
Current input burde	n0.75 VA
Accuracy :	
Voltage	0.5 % of readout \pm 2 digits
Current	0.5 % of readout \pm 2 digits
Powers	1 % of readout \pm 2 digits
Energy	1 % of readout \pm 2 digits
Test conditions :	
- Errors due to C.T. a	re not included and direct voltage measurement
- Temperature betwee	$en + 5 ^{\circ}C$ and $+ 45 ^{\circ}C$
- Power factor betwee	en 0.5 and 1
- Measured values be	tween 5 % 100 %
Mechanical Chara	
- Connection :	pluggable connection terminal
- Case material	Self-extinguisnable, VU plastic
- Protection	Assembled unit (frontal) : IP 55
D	Un-assembled unit (side and rear covers) : IP 31
- Dimensions	144 x 144 mm - depth: 84 mm
- Weight	0.400 kg

- Supply network analyzer CVM-144	I (PROFIBL	JS)		Page	No.
Relays characteristics: accord - Maximum switching load - Maximum switching voltage - Maximum switching current	ling to mo : 2500 : 400 : 10 A	del VA V a.c.			
- Mechanical endurance - Energy / alarms pulses	: 3 x 1 : max	0 ⁷ operations .1 pulse / s			
At full load: (250 V a.c. / 10 A) - Electrical endurance - Maximum operation cadence	: 1 x 1 : 450 c	0 ⁵ operations			
Analog output features: accor- Output type: 0/4-20 mA- Resolution: 4096 points- Maximum impedance: 500 Ω	ding to th	e model			
Analog input features: accord 0-20 mA inputs - Resolution : 4000 points - Input impedance : 200 Ω	l ing to the (12 bits)	model			
 Characteristics of residual cur Transformer type: WG Series Current measuring range: Depend Input: 3A → 30 mA - 3 Resolution: 4000 points (12 bits) 	rents mea ding on use 3 A	asuring input: a d input. 30 A → (300	acc. to t mA – 30	he moo A)	del
Safety Category III - 300 V Protection aga	a.c. / 520 a inst electric	a.c., as per EN-6 shock by class I	1010 I double-i	isolati	
Standards : IEC 664, VDE 0110, EN 50082-1 , EN-610	UL 94, IEC 010-1	801, IEC 348, IE	C 571-1,	EN 500	81-1
<u>Dimensions</u> :	144				

8.- SAFETY CONSIDERATIONS



All installation specification described at the previous chapters named INSTALLATION AND STARTUP, INSTALLATION MODES and SPECIFICATIONS.

Note that with the instrument powered on, the terminals could be dangerous to touching and cover opening actions or elements removal may allow accessing dangerous parts. This instrument is factory-shipped at proper operation condition.

9.- MAINTENANCE

The **CVM-144** does not require any special maintenance. No adjustment, maintenance or repairing action should be done over the instrument open and powered and, should those actions are essential, high-qualified operators must perform them.

Before any adjustment, replacement, maintenance or repairing operation is carried out, the instrument must be disconnected from any power supply source.

When any protection failure is suspected to exist, the instrument must be immediately put our of service. The instrument's design allow a quick replacement in case of any failure.

10.- TECHNICAL SERVICE

For any inquiry about the instrument performance or whether any failure happens, contact to CIRCUTOR's technical service.

CIRCUTOR S.A. - After-sales service c / Lepanto , 49 08223 - TERRASSA Tel - + 34 93 745 29 00 fax - + 34 93 745 29 14 E-mail : central@circutor.es

11.- CVM-144... COMMUNICATIONS



One or several CVM-144... power meters can be connected to a PROFIBUS network. By means of this network it is possible to erect a data centralization system at one or diverse controlling sites (PROFIBUS Master).

A slave number (from 01 to FF) must be assigned to each discrete to enable the Master for sending data inquiries to those addresses. These identification numbers are assigned from the metering unit itself by means of some selectors.

CVM-144 allows a maximum baud rate of **12 Mbits/s**. Besides, the metering unit **detects by itself the baud rate** used by the Master and, therefore, it executes self-configuration actions.

11.1.- Indicators

CVM-144 equipped with PROFIBUS DP module delivers some indicators to facilitate its installation:



- 1) Selector for the identification number (hexa) within the PROFIBUS network.
 - Lo: Least significant Hexadecimal digit.
 - Hi: Most significant Hexadecimal digit.

Example:

Ì	Identification No.	Lo	Hi
	1F (Hex)	F	1

- 2) Bus Error: Effectuates diverse signaling actions:
 - Off: Correct operation.
 - Blinking: the metering units is waiting for communication signals.
 - On: Error in PROFIBUS communications. Possible error in the communication string.
- 3) Bus status: This led indicates the existence of an error in the PROFIBUS network in the way that this device is not detected by the master unit. This situation might be caused by a connection error. during the normal operation this led must be off.
- 4) Power supply led: Indication of an appropriate power supply of the PROFIBUS communication module. This led must be always on.
- 5) DB9 connector: PROFIBUS DP connector.

11.2.- Connection arrangement

	DB9 CVM	-144 (PROFIBUS)
	No.	Description
	1	GND over 100 ohm resistor
	2	Not used
	3	A (Tx / Rx +)
	4	RTS (Control A)
	5	GND
	6	Voltage + 5 V
	7	Not used
	8	B (Tx / Rx -)
	9	GND

It is highly advisable always to use original PROFIBUS material to built the communication network.

Steps to be followed to complete the installation of this metering unit into the PROFIBUS network are following enumerated:

- Assign a identification number to the CVM-144 by means of the suitable selectors placed in the rear part of the metering unit.
- Connect the metering unit to the PROFIBUS network. The metering unit will perform by itself the necessary configurations actions to establish a communication to the Master.
- Error leds (red) placed in the rear part of the CVM-144 will put out. Only the power supply green led will be on.

Note:

Together with the metering unit, also the *.GSD driver is factory supplied. This driver is required to complete the Master PROFIBUS program. In case that you do not have this driver, you can also download this from this internet web-site: <u>www.circutor.es</u>.

--- Page No. 47

11.3.- Technical specifications

Protocol: PROFIBUS-DP								
Device type: Slave								
Identification No.: User-select	Identification No.: User-selectable in the metering unit.							
Communications: (Opto-isolation)	ted)							
- Baud rates:								
	9,6 k	187,5 k	3 M					
	19,2 k	500 k	6 M					
	93.75 k	1,5 M	12 M					
- Automatic baud rate det	ection							
Module description								
 Maximum number of per 	rmissible	modules:	1					
- Modules:								
"R/W Digital I/O (6 Byte)"								
"Read 1 Parameter (7 Byte)" "Read 2 Parameter (16 Byte)"								
Data format: Motorola								

11.4.- Data format

The CVM-144 (slave device) has a inquiry / answer system due to the great quantity of accessible data. With this system more than 150 parameters are accessible.

The data transference format will depend on the used function:

FUNCTIONS IMPLEMENTED INTO THE CVM-144:

FUNCTION 01 FUNCTION 03 or 04 FUNCTION 05 Reading of relay state read all the electrical parameters of the CVM-144. Writing one relay

In case of an error in the implementation of the reading / writing command of the but changing the function:

- Function 01 → Answer 81...
- Function 03 y 04 \rightarrow Answer 83 84...
- Function 05 \rightarrow Answer 85...

• PARAMETER READING (FUNCTION 03 and 04) :

This function is used to read all the electrical parameters measured by the CVM-144. All electrical parameters are 32-bits long, therefore, two Words (registers) are required to demand each parameter.

Answer:

	Function Initial position		No. of registers to be read		
01	2 bytes (Hexa)	2 bytes (Hexa)	2 bytes (Hexa)		

Answer:

	Function	No. of received bytes	Data		
01	2 bytes (Hexa)	1 bytes (Hexa)	4 bytes x Register (Hexa)		

Registers assigned to different parameters measured by the CVM-144:

		MODBUS REGISTERS HEXA-DECIMAL (longs)		
PARAMETER	Units	PRESENT	MAXIMUM	MINIMUM
		Value	Value	Value
Phase voltage - V 1	V x 10	00-01	60-61	C0-C1
Current - A 1	mA	02-03	62-63	C2-C3
Active power - kW1	W	04-05	64-65	C4-C5
Reactive power - kvar 1	var	06-07	66-67	C6-C7
Power factor - PF1	PF x 100	08-09	68-69	C8-C9
Phase voltage - V 2	V x 10	0A-0B	6A-6B	CA-CB
Current - A 2	mA	0C-0D	6C-6D	CC-CD
Active power - kW2	W	0E-0F	6E-6F	CE-CF
Reactive power - kvar 2	var	10-11	70-71	D0-D1
Power factor - PF2	PF x 100	12-13	72-73	D2-D3
Phase voltage - V 3	V x 10	14-15	74-75	D4-D5
Current - A 3	mA	16-17	76-77	D6-D7
Active power - kW3	W	18-19	78-79	D8-D9
Reactive power - kvar 3	var	1A-1B	7A-7B	DA-DB
Power factor - PF3	PF x 100	1C-1D	7C-7D	DC-DD

		MODBUS REGISTERS		TERS
		HEXA-	DECIMAL (longs)
PARAMETER	Units	PRESENT	MAXIMUM	MINIMUM
		Value	Value	Value
Three-phase active power-kW III	W	1E-1F	7E-7F	DE-DF
Three-phase inductive power-kvarL III	var	20-21	80-81	E0-E1
Three-phase capacitive power-kvarC III	var	22-23	82-83	E2-E3
Cos φ III	Cos φx100	24-25	84-85	E4-E5
Three-phase power factor - PF III	P.F.x100	26-27	86-87	E6-E7
Frequency (L1) - Hz	Hz x 10	28-29	88-89	E8-E9
Line voltage L1-L2 - V12	V x 10	2A-2B	8A-8B	EA-EB
Line voltage L2-L3 - V23	V x 10	2C-2D	8C-8D	EC-ED
Line voltage L3-L1 - V31	V x 10	2E-2F	8E-8F	EE-EF
%THD V 1	% x 10	30-31	90-91	F0-F1
%THD V 2	% x 10	32-33	92-93	F2-F3
%THD V 3	% x 10	34-35	94-95	F4-F5
%THD I 1	% x 10	36-37	96-97	F6-F7
%THD I 2	% x 10	38-39	98-99	F8-F9
%THD 3	% x 10	3A-3B	9A-9B	FA-FB
Active energy – kWh	Wh	3C-3D		
Inductive reactive energy - kvarh L	varLh	3E-3F		
Capacitive reactive energy - kvarh C	varCh	40-41		
Three phase apparent power	kVA III	42-43	A2-A3	102-103
Power demand (L1)	Pd	44-45	A4-A5	
Three-phase current	mA	46-47	A6-A7	106-107
Neutral current	mA	48-49	A8-A9	108-109
Analog input 1*	Real value	4A-4B	AA-AB	10A-10B
Analog input 2*	Real value	4C-4D	AC-AD	10C-10D
Analog input 3*	Real value	4E-4F	AE-AF	10E-10F
Residual (earth leakage) current**	mA	50-51	B0-B1	110-111
Power demand (L2) ***	Pd	52-53	B2-B3	
Power demand (L3)***	Pd	54-55	B4-B5	

* MODBUS addresses valid only for the analogue input modules (770571) ** MODBUS addresses valid only for the "currents" module (770572578)

*** This parameters are only enabled if the maximum demand by line current has been programmed

		MODBUS REGISTERS			
PARAMETER	Units	HEXA-DECIMAL (longs)			
		L1	L2	L3	
Fundamental	mA	1F4-1F5	212-213	230-231	
Harmonic 2	%	1F6-1F7	214-215	232-233	
Harmonic 3	%	1F8-1F9	216-217	234-235	
Harmonic 4	%	1FA-1FB	218-219	236-237	
Harmonic 5	%	1FC-1FD	21A-21B	238-239	
Harmonic 6	%	1FE-1FF	21C-21D	23A-23B	
Harmonic 7	%	200-201	21E-21F	23C-23D	
Harmonic 8	%	202-203	220-221	23E-23F	
Harmonic 9	%	204-205	222-223	240-241	
Harmonic 10	%	206-207	224-225	242-243	
Harmonic 11	%	208-209	226-227	244-245	
Harmonic 12	%	20A-20B	228-229	246-247	
Harmonic 13	%	20C-20D	22A-22B	248-249	
Harmonic 14	%	20E-20F	22C-22D	24A-24B	
Harmonic 15	%	210-211	22E-22F	24C-24D	

<u>EXAMPLE</u>

INQUIRY	01 03 00 00 00 02
01	
03	Reading function
00 00	Initial address (first register)
00 02	Number of registers to be read
ANSWER	01 03 04 00 00 08 4D
01	
03	Reading function – the one use for the inquiry
04	Bytes received (20)
00 00 08 4D	V 1x10 (register 00 Hex), in decimal 212.5 V

DIGITAL INPUTS AND OUTPUTS READING (FUNCTION 01):

This function is used to know the status of the CVM-144 digital inputs and outputs.

Question		Answer						
Digital outputs	Digital inputs							
01010000008	010100100004			C)101	01XX	(
where XX (hexadecimal byte) ·	→ pass to binary	7 b6	b5	b4	b3	b2	b1	b0

bit	Digital output	Digital input (770 579 & 770 580)
bo	relay 1	Input 1
b1	relay 2	Input 2
b2	Not used	Input 3
b3	Not used	Input 4

• DIGITAL OUTPUTS WRITING (FUNCTION 05):

This function is used to force the status of the CVM-144 digital outputs.

Output No.	Message	Answer	
Relay 1	01050000xx00	01050000xx00	
Relay 2	01050001xx00	01050001xx00	
Where: 00 -> Deactivate			
FF -> Activate			

12.- APPENDIX A: Second SET-UP of the CVM-144

A second SET-UP menu is accessible in order to perform the configuration of the CVM-144 with other features different from factory-supplied ones.

To access this menu proceed as follows:

- Being the CVM-144 powered off, simultaneously press "
 "min" keys.
- Holding these keys pressed, powered the CVM-144 on.

When this option of the 2^{nd} Setup menu is accessed, the following message will be shown in screen during some seconds

Set	
UP	
Inic	

12.1.- SET-UP locking or unlocking



Loc (locked SET-UP) or Unloc (unlocked SET-UP) Use the key "max" to modify the choice.

- Whether **LOC** is set, when the SET-UP is accessed, configuration parameters can be visualized but cannot be modified.
- <u>To modify the previously set option</u>, a **4-digit password** is required to be entered (in case that this password is not correct, this blinks and the previous menu is again accessed).

PASSWORD: 1234

To exit this set-up mode, the key RESET can be pressed at any moment (WARNING: if the set-up is exited by pressing the key RESET some last modifications might not be saved in memory) or reach the end of this set-up mode.

13.- APPENDIX B: Insertion of an expansion module into a CVM-144 unit

The installation of an extension card into a CVM-144 unit must be accomplished just following below enumerated steps:

Checking the card acknowledgement

1. Check that the expansion card to be inserted into the CVM-144 will be acknowledged by the power meter.

Code	Expansion module	6.xx
7 70 570	Mod. CVM 144 -C2	х
7 70 571	Mod. CVM 144 -C2 Analogue	х
7 70 572	Mod. CVM 144 -C2-Currents	х
7 70 569	Mod. CVM 144 -C2 Digital	х

Removing the rear cover

- 2. Disconnect the meter out from the electric network.
- 3. Pull the connection terminals out.
- 4. Insert a plain-edge screwdriver into the bottom gaps (see right picture) and pull up the holding pieces until these are released.
- 5. Now, the cover should be easily removable with the hand.



Insertion of a new module



- 6. Place the expansion card into the side rail (The 2nd one from the top) checking that the components keep under the card.
- 7. Smoothly insert the card, checking that the frontal pins correctly fit into the connector, until the card keeps firmly fixed.
- 8. Cut the necessary removable pieces out from the rear cover to permit it to be properly hold.
- 9. Place the CVM-144 rear cover back.

Detection of a new expansion module

10. For versions 6.xx and later ones, the expansion module detection process is automatically performed by the power meter.