

# accessories


## USB Converter to RS-232 or RS-485

### Description

- Converter of the USB network protocol to RS-232 or RS-485
- Power supply through the PC's USB port
- Transmission speed: 4800 bps to 128000 bps
- Recommended only for start-ups and possible communications

### Application

To convert the USB signal to RS-232 or RS-485.

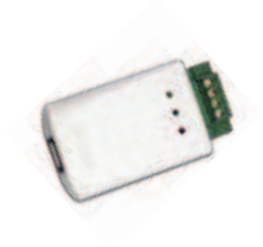

### References

Type	Code
USB / RS-485 converter	M54040
USB / RS-232 converter	M54050

## CVM-MINI Adaptor

### Front panel adaptor

### Description

Adaptor for the CVM-MINI for its installation on 72 x 72 mm panels

### Application

- For 72 x 72 mm front panel
- Central fixing
- Adjustable on the rear with two straps



### References

Type	Code
MINI panel adaptor	M5ZZF1