WG Series

WG

WG Series Earth Leakage transformers

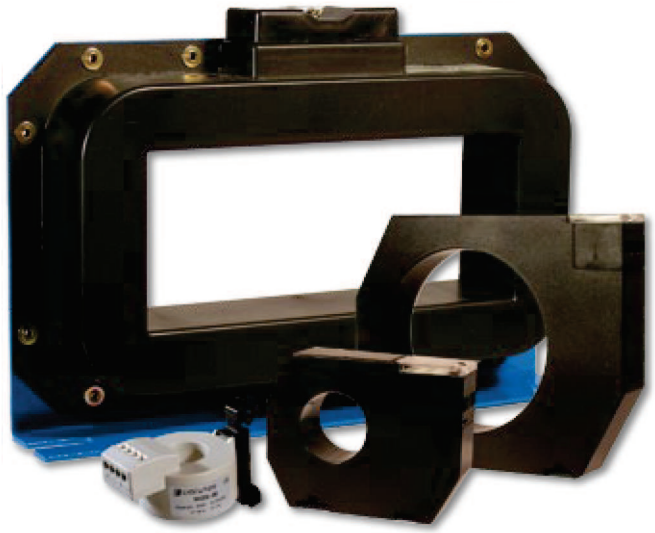

Description

The earth leakage transformers of the **WG** Series have been designed to work with the relays of the **WG** Series. The sensitivity (trigger current) of the transformer-relay set is established by the associated relay.

References

Useful diameter (mm)	Weight (g)	I_n (A)	Type	Code
20 Ø	76	acc. relay	**WGS-20**	**P10131**
30 Ø	95	acc. relay	**WGS-30**	**P10132**
35 Ø	181	acc. relay	**WG-35**	**P10111**
70 Ø	274	acc. relay	**WG-70**	**P10112**
105 Ø	545	acc. relay	**WG-105**	**P10113**
140 Ø	1 222	acc. relay	**WG-140**	**P10114**
210 Ø	2 040	acc. relay	**WG-210**	**P10115**
70 x 175	2 400	acc. relay	**WG-70x175**	**P10116**
115 x 305	5 450	acc. relay	**WG-115x305**	**P10117**
150 x 350	7 400	acc. relay	**WG-150x350**	**P10118**
200 x 500	13 400	acc. relay	**WG-200x500**	**P10119**

WGS Dimensions

WGS-20

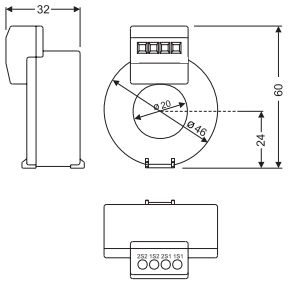

WGS-30

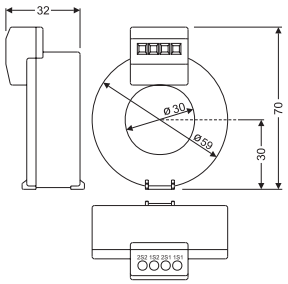

WG Dimensions

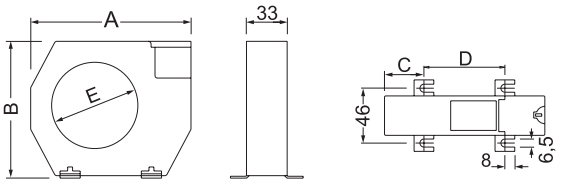

Type	A	B	C	D	E
WG-35	100	79	26	48,5	35
WG-70	130	110	32	66	70
WG-105	170	146	38	94	105
WG-140	220	196	48,5	123	140
WG-210	299	284	69	161	210

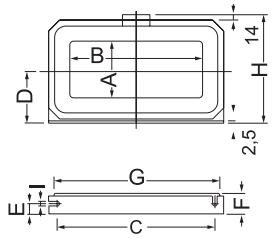

Type	A	B	C	D	E	F	G	H	I
WG-70X175	70	175	225	85	22	46	261	176	7,5
WG-115X305	115	305	360	116	25	55	402	240	8
WG-150X350	150	350	415	140	28	55	460	285	8

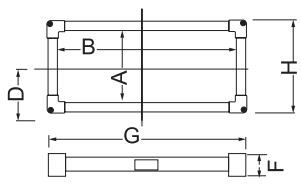

Type	A	B	C	D	E	F	G	H	I
WG-200X500	200	500	-	140	-	62	585	285	-